




## Mounting window or door

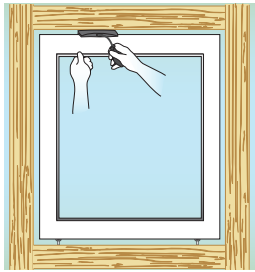


1. Place the window- or the door frame in the opening. The frame must stand on a firm, horizontal surface, use e.g. ESSVE Level screw. Place a Pumpbag on the upper side of the frame to keep the frame in place.

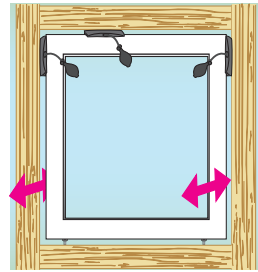

2. Adjust the frame to the correct position. Now place a Pumpbag on each side of the frame, at the top.

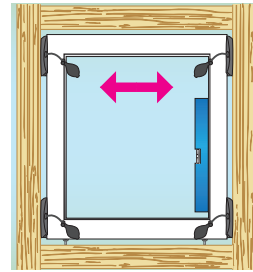

3. Remove the Pumpbag from the top edge and place it together with a second Pumpbag on each side of the frame, on the lower edge. Now adjust the frame vertically by adjusting the pressure in Pumpbag, check with a spirit level.

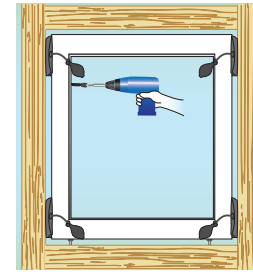

4. Fit the frame with a suitable frame attachment, e.g. Programa frame screw or Indu-Prog frame sleeve.